


## WIRING DIAGRAM

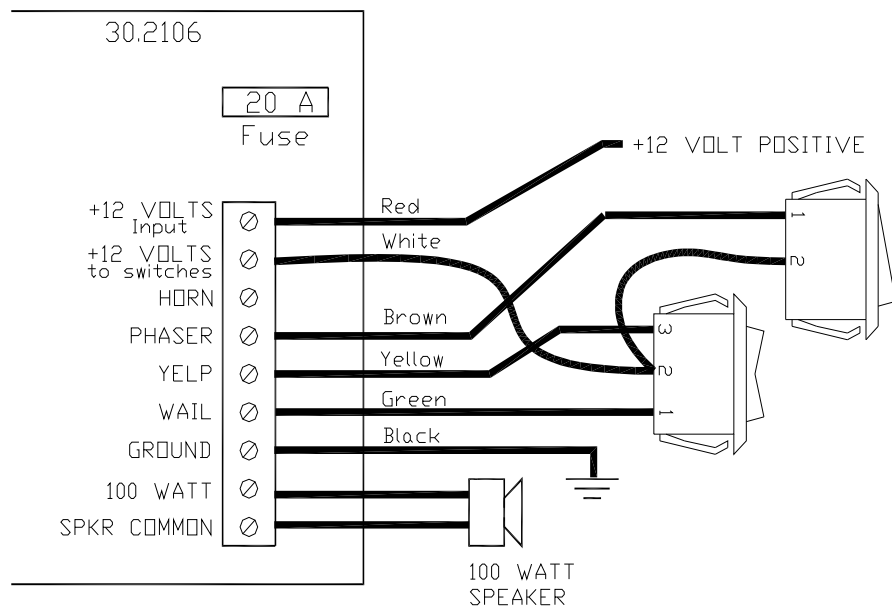

## Installation Manual

# SHO-ME®

## ELECTRONIC SIREN

### Model 30.2106

Manufactured in the U.S.A

### Other quality products manufactured by SHO-ME®

Speakers; LED Lights; Strobe Lights (Directional and 360°);  
Headlight Flasher Kits; Full size LED Light Bars; Mini LED Light Bars;  
Mini-Bars; Custom Switch Panels; Spot and Flood Lights;  
6 Volt Rechargeable Lights; Map Lights; Megaphones;  
Accessory Outlets; Bucket Lights  
and many more Components and Accessories.



P.O. Box 543 • 804 E. Hwy 248 Cassville, MO 65625-0543

### Local and International Numbers

Phone: 417-847-4791 Fax: 417-847-2222

### U.S. and Canada Toll-Free Numbers

Phone: 800-641-4098 Fax: 800-526-1240

# **ELECTRONIC SIREN**

**MODEL 30.2106**

## **INTRODUCTION**

The 30.2106 siren consists of an amplifier which powers one 100 watt RMS speaker. The amplifier, because of its small physical size, mounts conveniently in a remote position from the function control switch.

The 30.2106 siren system includes two switches. The rocker allows the operator to select the WAIL or YELP functions. The momentary switch allows the operator to sound the PHASER .

## **INSTALLATION OF POWER AMPLIFIER**

Select a location suitable for installation of the amplifier. This area must be free from moisture, heat, and abuse. **DO NOT MOUNT IN THE ENGINE COMPARTMENT.** Using the amplifier as a template, mark the location of the mounting holes. Drill holes at these locations to assist in starting the mounting screws provided. All installations are the sole responsibility of the buyer.

## **CONTROL SWITCH**

Select a location suitable for installation of the control switch. The area selected should provide ease of operation and must not interfere with normal operation of the vehicle or deployment of air bag. Using the switch bracket as a template, mark the location of the mounting holes. Drill holes at these locations to assist in starting the mounting screws provided.

## **SPEAKER CONNECTIONS**

Use only one 100 watt speaker with an 11 ohm impedance. Connect one conductor of the 16-2 wire supplied to the terminal on the siren marked "SPKR COMMON". Connect the second conductor of the 16-2 wire to the "100 WATT" terminal on the siren.

## **POWER INPUT CONNECTIONS**

Connect the supplied black wire to the terminal on the siren marked "GROUND". Connect the other end of the black wire to ground. The negative terminal of the battery is a preferable location. Connect the supplied red wire to the terminal on the siren marked "+ 12 VOLTS". This terminal on the siren connects directly to the on board 20 amp fuse. Connect the other end of the red wire to a positive source. To protect the wiring going to the siren, install an in-line fuse or circuit breaker on the end of the wire as close to the positive source as possible. The current draw of the siren during operation is approximately 15 amps, when supplied by 13.8 volts. The current draw of the siren when power is applied, but no functions are selected, is approximately .03 amps.

## **CONTROL SWITCH CONNECTIONS**

Connect the wires from the control switch to the terminals on the siren as shown in the diagram. By applying +12 volts to one of the terminals, the corresponding sound will be produced. Connect the green wire from the switch to the terminal on the siren marked "WAIL". Connect the brown wire from the switch to the terminal on the siren marked "PHASER". Connect the yellow wire from the switch to the terminal on the siren marked "YELP". Run red wire from terminal marked "+12 VOLTS Input" to power source. Connect the White wire from switch panel to terminal marked "+12 VOLTS to switches".

## **WARRANTY**

Merchandise returned under warranty shall be subject to factory inspection and repaired, replaced, or credited at Able 2 Products Company, Inc.'s option. Water, condensation, or negligence will **VOID** warranty. This unit's warranty period is for 2 years parts and labor.